


A600 Instruction manual



Safety precautions:

1. Please do not use overloaded power sources, sockets, or damaged power cords and plugs. Such usage may endanger your safety and could potentially cause a fire. If such situations occur, please promptly inform the sales or after-sales department and request a replacement.
2. Do not attempt to open the product's internals to avoid damaging the product. If any abnormalities occur during product use, please carefully read the product's instructions manual, confirm whether the product is being operated according to normal procedures, or consult with sales and after-sales support.
3. Do not disassemble the equipment or shake it forcefully while it is in operation, as this may cause the equipment to malfunction.
4. Please do not place the product or power adapter in water or expose them to water. Do not use a power adapter that has been exposed to water.
5. When thunderstorms occur or in adverse weather conditions, refrain from operating the equipment or touching the power cords to prevent the risk of electric shock.
6. If the product contains liquid (such as essential oils), please do not invert, tilt, or rotate the product to prevent liquid spillage and damage to the product.


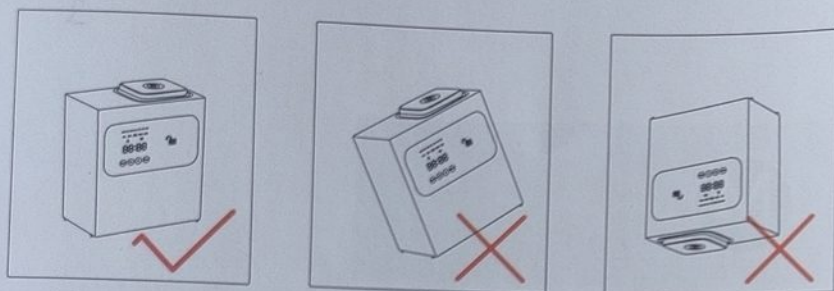


Product Specifications:


Model	A600
Essential Oil Capacity	160ML
Coverage Range	100-600m ³
Power	12W
Machine Size	160x90x198 (mm)
Net Weight	1.5kg
Power Supply	AC11V-240V
Operating Noise	38dba

The oil consumption is based on the maximum setting of the device, using Shangri-La essential oil for testing. Test conditions include: oil viscosity of 9.5 MPA.S, indoor temperature of 30°C, air humidity of 45%. These specifications are provided for reference only.


Installation Instructions:

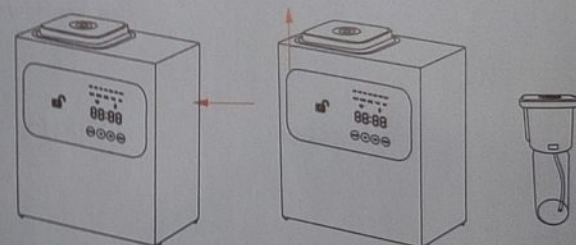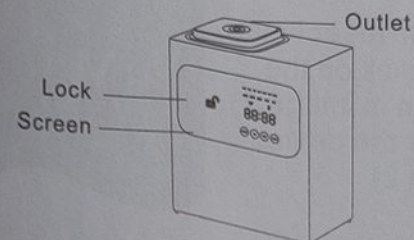

1. Follow the direction of the arrow to pull out the bottle


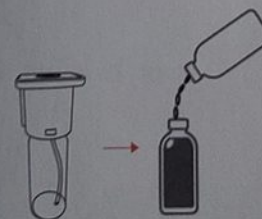


2. Take out the bottle, turn counterclockwise to open the atomizing head and bottle, and refill liquid to the bottle.

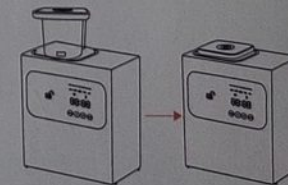

3. Put the bottle back in, connect the power supply to set the working time


Installation Instructions:

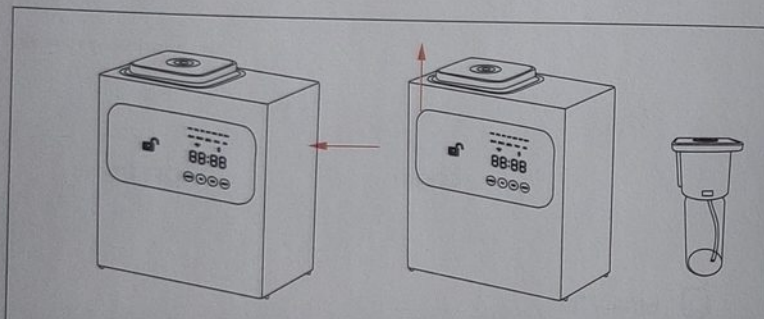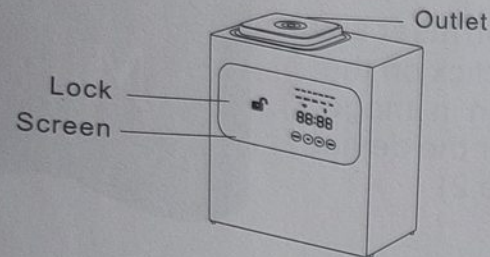

1. Follow the direction of the arrow to pull out the bottle




2. Take out the bottle, turn counterclockwise to open the atomizing head and bottle, and refill liquid to the bottle.

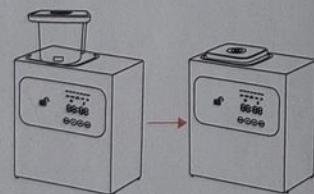

3. Put the bottle back in, connect the power supply to set the working time

Screen Operation Instructions:

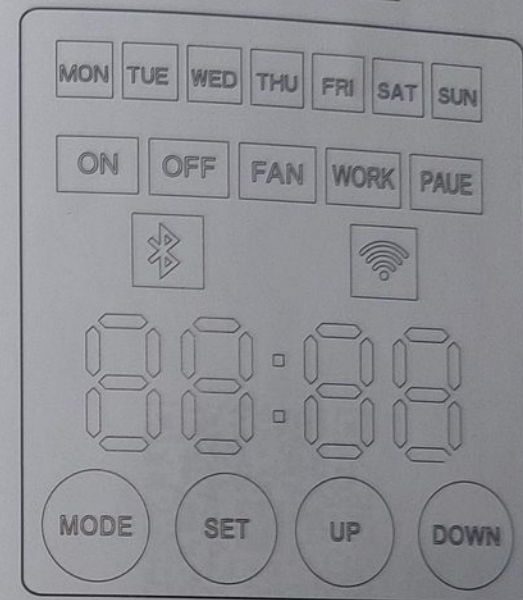

MODE

- (1) Press the Mode key once to display the first segment by default. You can press "UP" and "DOWN" to select a segment. A maximum of 6 working periods are displayed.
- (2) After selecting the current working period, press the Mode key to select the week during the working period. Press "UP" and "DOWN" to choose.
- (3) Press Mode button to come into work time operations. Indicator light "ON", begin to work. The default is hour, you can press "UP" and "DOWN" to choose.
- (4) Press Mode button again to perform minute operation, can press "UP" and "DOWN" to choose.
- (5) Press Mode button again, indicator light "OFF", stop to work. The default is hour, you can press "UP" and "DOWN" to choose.
- (6) Press Mode button again to come into minute operation, can press "UP" and "DOWN" to choose.
- (7) Press Mode button again to set working seconds, indicator light "Work" light up, can press "UP" and "DOWN" to choose.
- (8) Press Mode button again to set pause seconds, indicator light "Pause" light up, can press "UP" and "DOWN" to choose.

The same setting way to set the second, third, forth...sixth working period.

Mode: Long press Mode button to restore factory setting

SET: (1) Long press to come into the operation of time setting. The default operation is hourly, can press "UP" and "DOWN" to choose.

(2) Press SET again, come into minute operation, can press "UP" and "DOWN" to choose.

(3) Press SET again, come into week operation, can press "UP" and "DOWN" to choose.

Press "UP" turn on/off the fan

Press "DOWN" in test mode, the device is forced to work for 8 seconds.

When the phone is connected to the device using Bluetooth, the Bluetooth indicator will light up. When the device is connected to the Internet, the wifi indicator will light up.



APP Download

Please read the instruction manual carefully before use!

Google Play Download Application:

<https://play.google.com/store/apps/details?id=com.lm.scentdiffuser>

User Manual for App Usage:

1. Scan the QR code on the cover of manual or on the back of the machine to download and install the app.
2. Open the Scent Diffuser smart app interface and click on the WiFi icon (as shown in image 1).
3. Click to search for the device (as shown in image 2)



Welcome to the Scent Diffuser
Let's start

Login

Sign In

 Email/Tel

 Password

[Forgot Password](#)

Login

Bluetooth login free



My Profile



Click to modify profile



Password Modification



Settings



DeviceList(bluetooth)



Enter device name Please



dev289



dev255



Device name:

Mode

none



Run

Run

stop

Time

work

end



Pump



Interrupt



Power switch



Fan switch



Mode setting



DeviceList(bluetooth)




account



Device name:

Mode none


Run Run stop
Time work end



Pump Interrupt



Power switch



Fan switch



Mode setting



DeviceList(bluetooth)



account

11:05



Device name:

Add mode

☒ Week settings

Mon Tues Wed Thur Fri Sat d

Time settings



Time end

08 10 04
09 : 00 11 : 05
10 01 12 06

Run settings



Run Time Stop Time

59S 60S 61S
60S 60S 61S

Cancel

Confirm



DeviceList(bluetooth)



account